

User Care Guide

RCA-10/18



Power System

- Connect all cables before powering on the Raptor and RBCU-1. Do not hot-swap cables

Water Flow System

- Use potable content water in the couplant flow system
- To avoid water entry into the body of the scanner, orient the scanner as below when running a water pump


Not Recommended



Recommended



Recommended

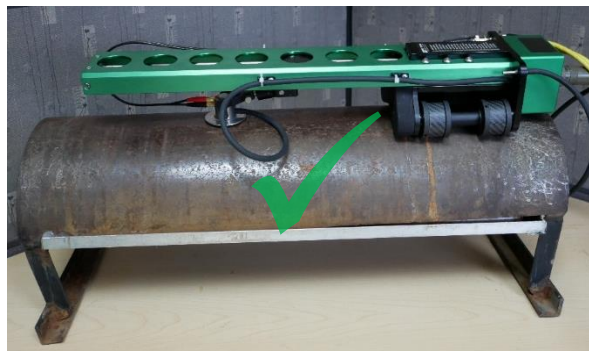

User Care Guide

RCA-10/18



Main Screw

- Check the grease on the main screw for lubricant coverage and contamination after every scanning session.
- Clean out contaminated lubricant and re-lubricate with silicone grease.

Magnet Wheels

- Use extreme caution when handling metal near the magnetic wheels, the magnets are very strong and have an attractive force over distance
- Keep sensitive electronics and magnetic systems (watches, bank cards, etc.) away from magnet wheels at all times

